

The NEW Coupling Generation with Snapcap




As the leading manufacturer of flexible couplings, Flexseal brings reliable torque control to the market.

What is Snapcap?

The Snapcap has been designed to be used with Flexseal clamps to ensure a more reliable installation. On installation, when the clamp is within the recommended torque range, the head of the Snapcap breaks off. This solution helps to reduce one of the largest sources of human error during flexible coupling installation.

Another way Flexseal adds value

- a reliable indication that the correct torque range has been reached
- no added time on installation
- colour coded for easy identification
- medium duty version for 2A couplings (*gold*)
- heavy duty version for 2B couplings (*black*)

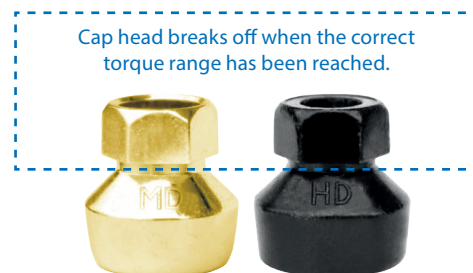

V002MAY17